Comfort 350 Top Polar

Dimensional drawing (Right version)

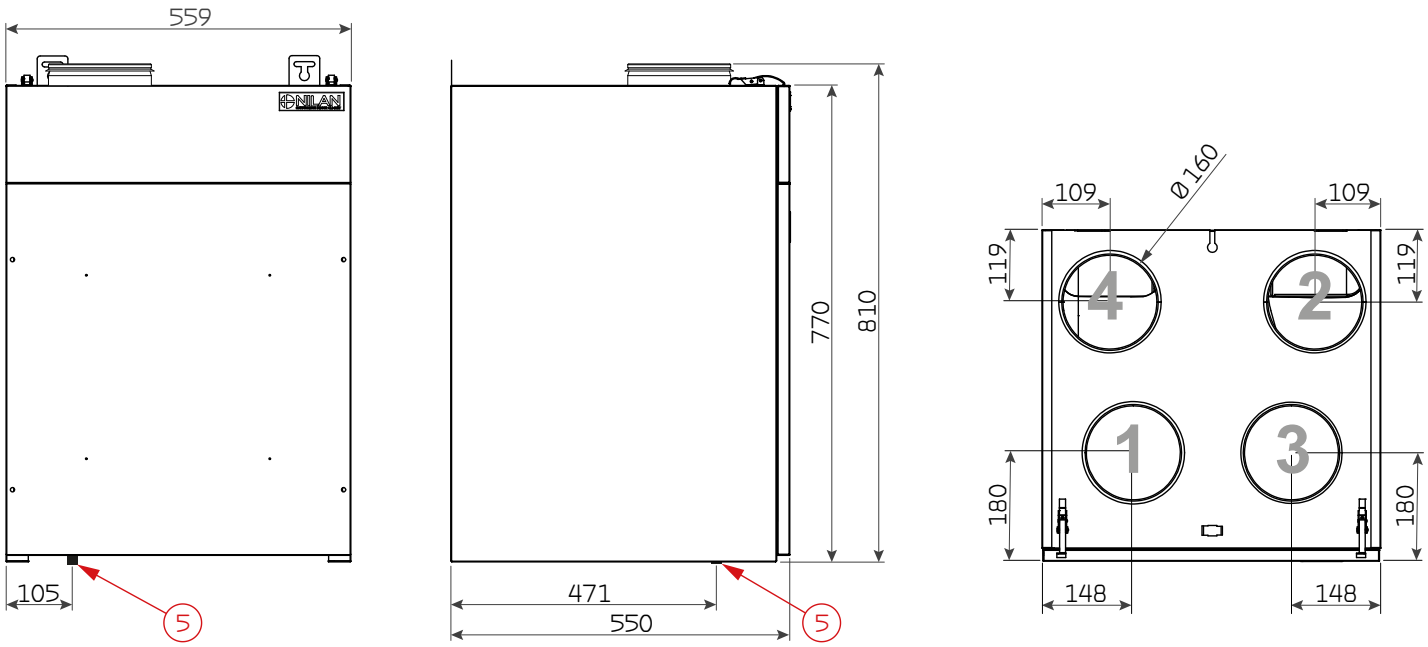

Connections:
1. Outdoor air
2. Supply air
3. Extract air
4. Discharge air
5. Condensate drain

Nilan A/S
www.en.nilan.dk • nilan@nilan.dk